















 




















 










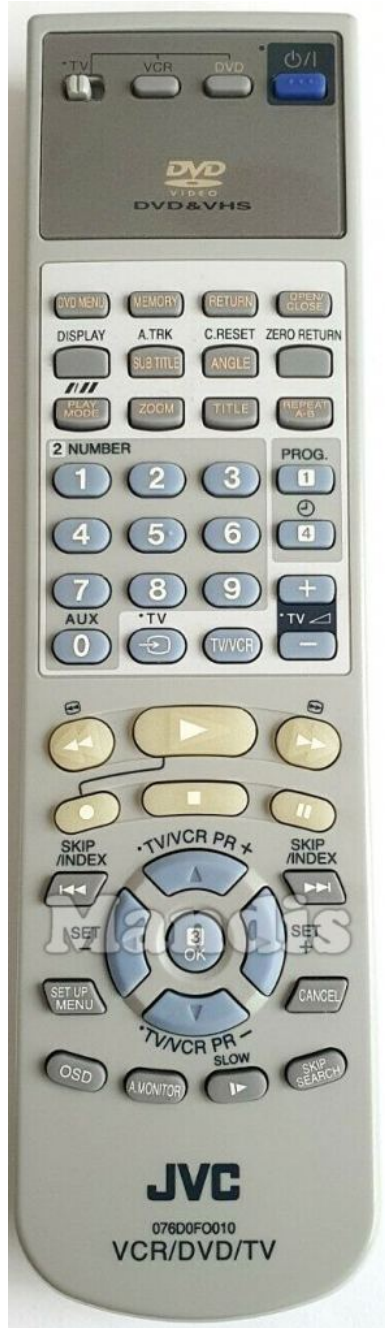

Original	Recharge
 VCR	 Shift + 4
 DVD	 Shift + 2
 Power	 Power
 DVD Menu	 D.Menu / Top
 Memory	 Text / Goto
 Return	 Back / Return
 Open/Close	 Eject / Surround
 Display	 Shift + Display / Media
 Subtitle	 Subtitle / EQ
 Angle	 Info / Angle
 Zero Return	 Shift + Back / Return
 Play Mode	 Smart / List
 Zoom	 Zoom / Size
 Title	 Sound / Title
 Repeat A-B	 Yellow / YouTube / Repeat
 1	 1
 2	 2

Original	Recharge
 3	 3
 [1]/Prog.	 TV/Radio /
 4	 4
 5	 5
 6	 6
 [4]/Timer	 Sleep / Timer
 7	 7
 8	 8
 9	 9
 Tv Vol+	 Vol+
 0/AUX	 Shift + 7
 0/AUX	 0
 Tv/VCR	 AV / Input / RDS
 Tv Vol-	 Vol-
 << / [ <<< ]	 << / Tune-
 Play	 Play / Slow
 >> / [ >>> ]	 >> / Tune+





Original	Recharge	Original	Recharge
 Stop	 Stop / Hold		
 Pause	 Pause / Step / Freeze		
 I<< Skip/Index	 I<< / Preset-		
 Up	 Up		
 >>I Skip/Index	 >>I / Preset+		
 Left	 Left		
 OK	 OK		
 Right	 Right		
 Set Up Menu	 Setup / OPT /		
 Down	 Down		
 Cancel	 Exit / Cancel / Clear		
 OSD	 Display / Media		
 A. Monitor	 Menu / Home		
 I> Slow	 Shift + Play /		
 Skip Search	 Red / Netflix / Search		

