



Original	Recharge
TV Direct	TV/Radio /
Power Audio	Audio / Lang I/II
Power DVR/DVD	OK
Power VCR	Shift + Power
Power STB	Power
Power TV	Shift + OK
DVR/DVD	Fav / Marker / PC
VCR	Shift + Guide / EPG / -/-
TV	Shift + TV/Radio / Program
FM/AM	Smart / List
Video	Shift + Red / Netflix /
Tv/Video	Red / Netflix / Search
Muting	Mute / Dimmer
Channel+	CH+ / Page+
Vol+	Vol+
Channel-	CH- / Page-
Vol-	Vol-

Original	Recharge
Play VCR	Play / Slow
<< VCR	<< / Tune-
Stop/Memory	Stop / Hold
Pause VCR	Pause / Step / Freeze
>> VCR	>> / Tune+
Smart Surround/Setup	Setup / OPT /
Display/On	Display / Media
1 VCR	Shift + 1
1 STB	1
AD Input	AV / Input / RDS
2 VCR	Shift + 2
2 STB	2
Decode	Shift + D.Menu / Top Menu
3 VCR	Shift + 3
3 STB	3
4 VCR	Shift + 4
4 STB	4





	Original	Rechange		Original	Rechange
BASS BOOST	4	Bass Boost	SHIFT + AUDIO	LANG III	Shift + Audio / Lang I/II
C.TONE	5	5 VCR	SHIFT + 5	TAPE	Shift + 5
C.TONE	5	5 STB	5	5	5
C.TONE	5	C. Tone	TITLE SOUND		Sound / Title
MIDNIGHT	6	6 VCR	SHIFT + 6	TUNER	Shift + 6
MIDNIGHT	6	6 STB	6	6	6
MIDNIGHT	6	Midnight	SHIFT + SMART	LIST	Shift + Smart / List
	7	7 VCR	SHIFT + 7	AUX - HDD	Shift + 7
	7	7 STB	7	7	7
A.POSITION	8	8 VCR	SHIFT + 8	USB	Shift + 8
A.POSITION	8	8 STB	8	8	8
A.POSITION	8	A. Position	YouTube REPEAT A-B		Yellow / YouTube / Repeat
	9	9 VCR	SHIFT + 9	BLUETOOTH	Shift + 9
	9	9 STB	9	9	9
SLIDE EFFECT		Effect	TOP MENU D.MENU		D.Menu / Top
	0	0 VCR	SHIFT + 0	HDMI - BAT	Shift + 0
	0	0 STB	0	0	0

	Original	Rechange		Original	Rechange
100+ +10	+10 TV	GUIDE EPG		GUIDE EPG	Guide / EPG / -/-
DIMMER DISPLAY	Display/Dimmer	SHIFT + MEDIA DISPLAY		SHIFT + MEDIA DISPLAY	Shift + Display / Media
SURROUND	Surround	SURROUND		SURROUND	Eject / Surround
SLEEP	Sleep	TIMER SLEEP		TIMER SLEEP	Sleep / Timer
REC PAUSE	Rec Pause	REC MODE		REC MODE	Rec / Rec Mode
L-FRONT	Front L+				Up
FRONT-R	Front R+	SHIFT +			Shift + Up
CENTER	Center+	SHIFT + TUNE+			Shift + >> /
TEST TONE	Test Tone	GOTO TEXT			Text / Goto
L-FRONT	Front L-				Down
FRONT-R	Front R-	SHIFT +			Shift + Down
CENTER	Center-	SHIFT + TUNE-			Shift + << /
D.EQ FREQ	D.EQ.Freq	FORMAT PICTURE			Picture / Format
L-SURR	Surr L+	SHIFT +			Shift + Right
SURR-R	Surr R+				Right
SUBWFR	Subwfr+	SHIFT + CH PAGE			Shift + CH+ /
D.EQ LEVEL	D.EQ.Level+	SHIFT + VOL			Shift + Vol+





Original

Rechange

L-SURF	Surr L-	SHIFT + ←	Shift + Left
JRR-R	Surr R-	←	Left
SUBWFR	Subwfr-	SHIFT + CH PAGE	Shift + CH- /
D.EQ.LEVEL	D.EQ.Level-	SHIFT + VOL	Shift + Vol-

Original

Rechange





Original	Rechange
Power Audio	+ Shift + Power
Power Tv	Power
FM/AM	Eject / Surround
Tv Vol+	Vol+
Channel+ TV	CH+ / Page+
Tv Vol-	Vol-
Channel- TV	CH- / Page-
I<</Tuning-	I<< / Preset-
FM Mode FM/AM	+ Shift + TV/Radio / Program
>>I/Tuning+	>>I / Preset+
Memory FM/AM	+ Shift + Smart / List
TA/News/Info	Smart / List
PTY- FM/AM	TV/Radio /
PTY+ FM/AM	Guide / EPG / -/-
PTY Search	Red / Netflix / Search
Display FM/AM	Display / Media
1 FM/AM	+ Shift + 1

Original	Rechange
1 TV	1
2 FM/AM	+ Shift + 2
2 TV	2
3 FM/AM	+ Shift + 3
3 TV	3
4 FM/AM	+ Shift + 4
4 TV	4
5 FM/AM	+ Shift + 5
5 TV	5
6 FM/AM	+ Shift + 6
6 TV	6
7 FM/AM	+ Shift + 7
7 TV	7
8 FM/AM	+ Shift + 8
8 TV	8
9 FM/AM	+ Shift + 9
9 TV	9





Original	Recharge
10 FM/AM	+ Shift + Fav / Marker / PC
10/Tv Return TV	+ Shift + 0
0 TV	0
+10/100+	+ Shift + Guide / EPG / -/-
+10 TV	Fav / Marker / PC

Original	Recharge





Original	Rechange
 Power DVD	 Power
 I<<	 I<< / Preset-
 Play	 Play / Slow
 >>I	 >>I / Preset+
 <<	 << / Tune-
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 >>	 >> / Tune+
 Top Menu	 D.Menu / Top
 Up	 Up
 Menu	 Menu / Home
 Left	 Shift + Left
 Enter	 OK
 Right	 Right
 Down	 Down
 On Screen	 Shift + Display / Media
 Audio	 Audio / Lang I/II

Original	Rechange
 Subtitle	 Subtitle / EQ
 DVD Zoom	 Zoom / Size
 HDD Sound Effect	 Sound / Title
 Set Up	 Setup / OPT /
 1	 1
 2	 2
 3	 3
 ←	 Left
 4	 4
 5	 5
 6	 6
 VFP Progressive	 Smart / List
 7	 7
 8	 8
 9	 9
 Angle/Slide Effect	 Info / Angle
 10	 Guide / EPG / -/-





	Original	Rechange		Original	Rechange
	0	0			
	+10	Fav / Marker / PC			
	Return	Back / Return			
	Title Group	Shift + Sound / Title			
	Cancel	Exit / Cancel / Clear			
	Display/Dimmer	Display / Media			





Original	Rechange
Power	Power
Channel+	CH+ / Page+
Channel-	CH- / Page-
I<<	I<< / Preset-
Play	Play / Slow
>>I	>>I / Preset+
<<	<< / Tune-
Stop	Stop / Hold
Pause	Pause / Step / Freeze
>>	>> / Tune+
Top Menu	D.Menu / Top
Up	Up
Menu	Menu / Home
Left	Shift + Left
Enter	OK
Right	Right
Down	Down

Original	Rechange
On Screen	Shift + Display / Media
Audio	Audio / Lang I/II
Subtitle	Subtitle / EQ
DVD Zoom	Zoom / Size
HDD Sound Effect	Sound / Title
Set Up	Setup / OPT /
1	1
2	2
3	3
←	Left
4	4
5	5
6	6
VFP Progressive	Smart / List
7	7
8	8
9	9



