

 



 

 
 
 
 
 

 

 

 
 

 


 




 

 
 


 
 
 
 



 
 


 

 
 
 

 
 
 

 
 



 
 


 
 





	Original	Rechange	Original	Rechange
	 Power	 Power	 Search >>I/Up	 >>I
	 1	 1	 I<<	 I<<
	 2	 2	 Tuner/Band	 TV/R
	 3	 3	 Auto Preset	 Smart
	 4	 4	 Tape >	 Right
	 5	 5	 < Tape	 Left
	 6	 6	 Stop Tape	 Ok
	 7	 7	 Rec/Pause Tape	 Rec
	 8	 8	 >> Tape	 >>
	 9	 9	 << Tape	 <<
	 10	 0	 Active Hyper-Bass	 Media
	 +10	 Guide	 Sound	 Dual
	 Sleep	 Sleep	 Volume+	 Vol +
	 Open/Close CD	 Eject	 Volume-	 Vol -
	 Play CD	 Play	 Treble+	 Ch +
	 Pause CD	 Pause	 Treble-	 Ch -
	 Stop/Clear CD	 Stop	 Bass+	 Up



