



Original	Rechange
 Power	 Power
 Left / <<	 Left
 Right / >>	 Right
 Down / Stop	 Down
 Up / Play	 Up
 Showview/Video Plus+	 Smart
 Eject	 Eject
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

Original	Rechange
 000	 Shift + 0
 Up / Play	 Play
 Down / Stop	 Stop
 Pause	 Pause
 Rec	 Rec
 Right / >>	 >>
 Left / <<	 <<
 PR+	 Ch +
 PR-	 Ch -
 Down	 Shift + Down
 Up	 Shift + Up
 Right	 Shift + Right
 Left	 Shift + Left
 OK/i	 Ok
 Menu	 Menu

