
 





Original	Rechange	Original	Rechange
 Power Audio	 Power	 >>/Slow+	 >>
 Power Tv	 Shift + Power	 Stop	 Stop
 Tv/Video	 TV/R	 Pause	 Pause
 Eject	 Eject	 I<<	 I<<
 Display	 Info	 >>I	 >>I
 Dimmer	 Smart	 Up/Tuning+	 Up
 Vol+ Audio	 Vol +	 Down/Tuning-	 Down
 Vol- Audio	 Vol -	 Right/Preset+	 Right
 CH+ Tv	 Ch +	 Left/Preset-	 Left
 CH- Tv	 Ch -	 Enter	 Ok
 > USB Memory	 Red	 Back	 Back
 FM/AM	 Green	 Repeat	 Text
 Line	 Yellow	 Clock/Timer	 Shift + AV
 Fade Muting	 Mute	 Play Tuner	 Guide
 K2	 Blue	 I<< Group/Title	 Shift + Ch -
 Play DVD/CD	 Play	 >>I Group/Title	 Shift + Ch +
 <</Slow-	 <<	 Vol+ Tv	 Shift + Right





Original	Rechange
Vol- Tv	+ Shift + Left
Top Menu/PG	+ Shift + Menu
Menu/PL	Menu
Audio	Dual
Subtitle	Subt
Zoom	+ Shift + Eject
Angle	3D
Page	+ Shift + Media
Return	+ Shift + Back
Cancel	Exit
1	1
2	2
3	3
4	4
5	5
6	6
7	7

Original	Rechange
8	8
9	9
0	0
10/Tv Return	+ Shift + Guide
+10/100+	Pre Ch
Set Up	Media
3D Phonic	AV
HP Surround	+ Shift + Subt
Clear Voice	List
VFP	Options
Scan Mode	Format
QP Link	+ Shift + Smart
Sleep	Sleep
A.Standby	+ Shift + Red
Output Level	+ Shift + 3D
Input Level	+ Shift + TV/R
S.WFR Out	+ Shift + Mute

 



 


 
 
 
 



 

 

 
 

 

 







 






Original		Rechange		Original		Rechange	
	DVD Level		D. Menu				
	Treble+		Shift + 3				
	Treble-		Shift + 6				
	Bass+		Shift + 1				
	Bass-		Shift + 4				
	On Screen		Shift + Info				





Original		Rechange		Original	Rechange
	Power Tv		Power		
	1		1		
	2		2		
	3		3		
	4		4		
	5		5		
	6		6		
	7		7		
	8		8		
	9		9		
	10/Tv Return		Guide		
	0		0		
	+10/100+		Pre Ch		
	Vol+ Tv		Vol +		
	Vol- Tv		Vol -		
	CH+ Tv		Ch +		
	CH- Tv		Ch -		

