





 







 

 



 


 
 

 

 



 



 

 

 

 

 

 

 



 

 

 

 

 











Original	Recharge	Original	Recharge
 Power	 Power	 X	 Back / Return
 Review	 Smart / List	 9	 9
 Left/ <</-	 Left	 0	 0
 Left/ <</-	  << / Preset-	 Timer	 Sleep / Timer
 Right/ >>/+	 Right	 PR+	 CH+ / Page+
 Right/ >>/+	 >>  / Preset+	 Start Debut +	 Green / APP / Repeat
 Tv/VCR	 AV / Input / RDS	 Start Debut -	 Red / Netflix / Search
 ---	 Exit / Cancel / Clear	 Stop Fin +	 Blue / Prime Video / Random
 Audio	 Audio / Lang I/II	 PR-	 CH- / Page-
 1	 1	 Stop Fin -	 Yellow / YouTube / Repeat
 2	 2	 Date-	 Vol-
 3	 3	 Date+	 Vol+
 4	 4	 Prog	 TV/Radio /
 5	 5	 <<	 << / Tune-
 6	 6	 30 Sec/>>	 Display / Media
 7	 7	 Timer/?	 Shift + Sleep / Timer
 8	 8	 Play	 Play / Slow



