



Original	Rechange
Standby / On	Power
MD/AUX	Red
FM/AM	Green
Tape <>	Blue
Play/Pause CD	Play
Play/Pause CD	Pause
Play/Pause CD	Yellow
Dimmer	Smart
Display	Info
Sleep	Sleep
Prog	Shift + Sleep
Random	Media
Repeat	Text
Sound Mode	Dual
FM Mode	TV/R
Auto Preset	List
I<<	I<<

Original	Rechange
Stop	Stop
>>I	>>I
Cancel	Exit
< Multi Key	Left
CD Eject	Pre Ch
Multi Key >	Right
Set	Menu
Display Mode	Format
PTY/EON	AV
AHB Pro	Subt
Volume+	Vol +
Volume-	Vol -

