









































 







 



 



 



 









Original		Rechange		Original		Rechange	
	Mute		Mute / Dimmer		Yellow		Yellow / YouTube / Repeat
	Power		Power		Blue		Blue / Prime Video / Random
	1		1		i		Info / Angle
	2		2		Text		Text / Goto
	3		3		TV		Shift + 1
	4		4		TV		TV/Radio /
	5		5		Up / P+		Up
	6		6		Up / P+		CH+ / Page+
	7		7		Menu / OK		Menu / Home
	8		8		Menu / OK		OK
	9		9		Left / Vol-		Vol-
	0 / AV		0		Left / Vol-		Left
	0 / AV		AV / Input / RDS		Right / Vol+		Right
	Red / Zoom		Red / Netflix / Search		Right / Vol+		Vol+
	Red / Zoom		Zoom / Size		Down / P-		Down
	Green / Lang		Green / APP / Repeat		Down / P-		CH- / Page-
	Green / Lang		Audio / Lang I/II		Stop / Hold		Stop / Hold









 





















	Original	Rechange	Original	Rechange
	<<	<< / Tune-		
	[?]	Pause / Step / Freeze		
	◆	>> / Tune+		
	[🕒]	Sleep / Timer		
	Rec	Rec / Rec Mode		
	[X]	Exit / Cancel / Clear		
	[⏪]	Play / Slow		







	Original	Recharge	Original	Recharge
	Vol-			Vol-
	Vol-			Left
	Vol+			Vol+
	Vol+			Right
	Up			Up
	Up			CH+ / Page+
	<<			<< / Tune-
	Play			Play / Slow
	>>			>> / Tune+
	Down			Down
	Down			CH- / Page-
	Stop			Stop / Hold
	Power DVD			Power





Original		Rechange		Original		Rechange	
	Vol+		Right				
	Vol-		Vol-				
	Vol+		Vol+				
	Vol-		Left				
	Up		Up				
	Up		CH+ / Page+				
	<<		<< / Tune-				
	Play		Play / Slow				
	>>		>> / Tune+				
	Down		Down				
	Down		CH- / Page-				
	Stop		Stop / Hold				
	Power VCR		Power				

