



| Original | Rechange |
|--|--|
|  Open/Close |  Eject / Surround |
|  Dimmer |  Mute / Dimmer |
|  Power |  Power |
|  Active Bass EX. |  Subtitle / EQ |
|  Clock/Timer |  Shift + Sleep / Timer |
|  Sleep |  Sleep / Timer |
|  Bass |  Sound / Title |
|  Treble |  Audio / Lang I/II |
|  FM Mode |  CH+ / Page+ |
|  Play Mode |  Menu / Home |
|  Repeat |  Green / APP / Repeat |
|  Auto Preset |  CH- / Page- |
|  PTY/EON |  Back / Return |
|  Title/Edit |  Info / Angle |
|  Enter |  Smart / List |
|  Display/Chara. |  Display / Media |
|  Up |  Up |

| Original | Rechange |
|--|---|
|  Cancel |  Exit / Cancel / Clear |
|  Left |  Left |
|  Set |  OK |
|  Right |  Right |
|  Play/Pause MD |  Pause / Step / Freeze |
|  Down |  Down |
|  AUX |  7 |
|  <> Tape |  >> / Tune+ |
|  FM/AM |  6 |
|  Play/Pause CD |  Play / Slow |
|  I<< |  I<< / Preset- |
|  Stop |  Stop / Hold |
|  >>I |  >>I / Preset+ |
|  Volume+ |  Vol+ |
|  Volume- |  Vol- |

