



| Original | Recharge | Original | Recharge |
|-------------|----------------------------|---------------|-----------------------|
| Power | Power | 6 | 6 |
| AUX | Shift + 7 | 7 | 7 |
| Dimmer | Shift + Mute / Dimmer | 8 | 8 |
| 2 | 2 | 9 | 9 |
| Color | Setup / OPT / | 0 | 0 |
| 3 | 3 | 10 | Guide / EPG / -/- |
| Clock/Timer | Shift + Sleep / Timer | 10+ | Fav / Marker / PC |
| FM Mode | Shift + TV/Radio / Program | Title/Edit | Back / Return |
| Sleep | Sleep / Timer | Display/Chara | Zoom / Size |
| 1 | 1 | Cancel | Exit / Cancel / Clear |
| EON | Shift + Smart / List | Set | Menu / Home |
| Display | Display / Media | Enter | OK |
| Select- | CH- / Page- | Repeat | Green / APP / Repeat |
| Select+ | CH+ / Page+ | Play Mode | Smart / List |
| 4 | 4 | MD Play/Pause | Pause / Step / Freeze |
| PTY | Red / Netflix / Search | CD Play/Pause | Play / Slow |
| 5 | 5 | FM/AM | TV/Radio / |



