



Original	Rechange	Original	Rechange
1	1	Repeat	Green / APP / Repeat
2	2	CD	Shift + 3
3	3	CD 1	D.Menu / Top
Power	Power	CD 2	Setup / OPT /
4	4	CD 3	Text / Goto
5	5	TAPE	Shift + 5
6	6	SA Bass	Subtitle / EQ
Sleep	Sleep / Timer	Bass	Audio / Lang I/II
7	7	Treble	Eject / Surround
8	8	Cancel	Exit / Cancel / Clear
9	9	Set	OK
AUX	Shift + 7	Tape Direction	Menu / Home
10	0	Play / Up	Play / Slow
+10	Guide / EPG / -/--	Play / Up	Up
FM	Mute / Dimmer	Left	Left
TUNER	Shift + 6	Vol+	Vol+
Play Mode	Smart / List	Right	Right

Original	Rechange	Original	Rechange
1	1	Repeat	Green / APP / Repeat
2	2	CD	Shift + 3
3	3	CD 1	D.Menu / Top
Power	Power	CD 2	Setup / OPT /
4	4	CD 3	Text / Goto
5	5	TAPE	Shift + 5
6	6	SA Bass	Subtitle / EQ
Sleep	Sleep / Timer	Bass	Audio / Lang I/II
7	7	Treble	Eject / Surround
8	8	Cancel	Exit / Cancel / Clear
9	9	Set	OK
AUX	Shift + 7	Tape Direction	Menu / Home
10	0	Play / Up	Play / Slow
+10	Guide / EPG / -/--	Play / Up	Up
FM	Mute / Dimmer	Left	Left
TUNER	Shift + 6	Vol+	Vol+
Play Mode	Smart / List	Right	Right







Original	Rechange	Original	Rechange
1	1	Repeat	Green / APP / Repeat
2	2	CD	Shift + 3
3	3	CD 1	D.Menu / Top
Power	Power	CD 2	Setup / OPT /
4	4	CD 3	Text / Goto
5	5	TAPE	Shift + 5
6	6	SA Bass	Subtitle / EQ
Sleep	Sleep / Timer	Bass	Audio / Lang I/II
7	7	Treble	Eject / Surround
8	8	Cancel	Exit / Cancel / Clear
9	9	Set	OK
AUX	Shift + 7	Tape Direction	Menu / Home
10	0	Play / Up	Play / Slow
+10	Guide / EPG / -/--	Play / Up	Up
FM	Mute / Dimmer	I<</<< / Left	<< / Tune-
TUNER	Shift + 6	I<</<< / Left	Left
Play Mode	Smart / List	I<</<< / Left	I<< / Preset-

Original	Rechange	Original	Rechange
1	1	Repeat	Green / APP / Repeat
2	2	CD	Shift + 3
3	3	CD 1	D.Menu / Top
Power	Power	CD 2	Setup / OPT /
4	4	CD 3	Text / Goto
5	5	TAPE	Shift + 5
6	6	SA Bass	Subtitle / EQ
Sleep	Sleep / Timer	Bass	Audio / Lang I/II
7	7	Treble	Eject / Surround
8	8	Cancel	Exit / Cancel / Clear
9	9	Set	OK
AUX	Shift + 7	Tape Direction	Menu / Home
10	0	Play / Up	Play / Slow
+10	Guide / EPG / -/--	Play / Up	Up
FM	Mute / Dimmer	I<</<< / Left	<< / Tune-
TUNER	Shift + 6	I<</<< / Left	Left
Play Mode	Smart / List	I<</<< / Left	I<< / Preset-







Original	Rechange	Original	Rechange
1	1	TV	1
2	2	DVD	2
3	3	CD - STB	3
POWER	Power	POWER	Power
4	4	VIDEO	4
5	5	TAPE	5
6	6	TUNER	6
SLEEP	Sleep	TIMER SLEEP	Sleep / Timer
7	7	AUX - HDD	7
8	8	USB	8
9	9	BLUETOOTH	9
AUX	AUX	SHIFT + AUX - HDD	Shift + 7
10	10	HDMI - SAT	0
+10	+10	GUIDE EPG	Guide / EPG / -/-
FM MODE / MUTE	FM Mode/Mute	DIMMER MUTE	Mute / Dimmer
TUNER	TUNER	SHIFT + TUNER	Shift + 6
PLAY MODE	Play Mode	LIST SMART	Smart / List

Original	Rechange	Original	Rechange
REPEAT	Repeat	APP REPEAT	Green / APP / Repeat
CD	CD	SHIFT + CD - STB	Shift + 3
CD 1	Disc 1	TOP MENU D.MENU	D.Menu / Top
CD 2	Disc 2	OPT-TOOLS SETUP	Setup / OPT /
CD 3	Disc 3	GOTO TEXT	Text / Goto
TAPE	TAPE	SHIFT + TAPE	Shift + 5
S.A BASS	SA Bass	EQ SUBTITLE	Subtitle / EQ
BASS	Bass	LANG I/II AUDIO	Audio / Lang I/II
TREBLE	Treble	SURROUND	Eject / Surround
CANCEL	Cancel	CLEAR EXIT CANCEL	Exit / Cancel / Clear
SET	Set	OK	OK
TAPE DIRECTION	Tape Direction	HOME MENU	Menu / Home
Play	Play	SLOW	Play / Slow
I<</<< / Left	I<</<< / Left	TUNE-	<< / Tune-
I<</<< / Left	I<</<< / Left	Left	Left
I<</<< / Left	I<</<< / Left	PRESET-	I<< / Preset-
Vol+	Vol+	+ VOL	Vol+



