








 

 

 



 

 

 
 

 



 

 


 

 

 

 

 

 



 

 
 
 

 

 





Original		Rechange		Original		Rechange	
	Mute		Mute / Dimmer		P.Mode / OK		Smart / List
	Power		Power		Index		Play / Slow
	1		1		P.Mode / OK		Picture / Format
	2		2		AV		AV / Input / RDS
	3		3		Up / P+		Up
	4		4		Up / P+		CH+ / Page+
	5		5		Menu		Menu / Home
	6		6		Menu		OK
	7		7		Left / Vol-		Vol-
	8		8		Left / Vol-		Left
	9		9		Hold		Stop / Hold
	0		0		Right / Vol+		Right
	Red		Red / Netflix / Search		Right / Vol+		Vol+
	Green		Green / APP / Repeat		Sub Page		Subtitle / EQ
	Yellow		Yellow / YouTube / Repeat		Down / P-		Down
	Blue		Blue / Prime Video / Random		Down / P-		CH- / Page-
	Text		Text / Goto		<<		<< / Tune-





Original	Rechange	Original	Rechange
	Vol-		
	Left		
	Vol+		
	Right		
	Up		
	CH+ / Page+		
	<< / Tune-		
	Play / Slow		
	>> / Tune+		
	Down		
	CH- / Page-		
	Stop / Hold		
	Power		





Original	Rechange	Original	Rechange
			Vol-
			Left
			Right
			Vol+
			Up
			CH+ / Page+
			<< / Tune-
			Play / Slow
			>> / Tune+
			Down
			CH- / Page-
			Rec / Rec Mode
			Stop / Hold
			Power

