



Original	Rechange
	1
	3
	Power
	2
	4
	5
	6
	Shift + Power
	7
	8
	9
	Sleep / Timer
	Guide / EPG / -/--
	Shift + Back / Return
	0
	Shift + Exit / Cancel / Clear
	Fav / Marker / PC

Original	Rechange
Page	Shift + Fav / Marker / PC
Dimmer	Shift + Mute / Dimmer
Progressive	Exit / Cancel / Clear
Mic Mix	Shift + Smart / List
Zoom	Zoom / Size
Echo	Shift + Zoom /
Angle	Info / Angle
Reserve	AV / Input / RDS
Play Mode	Back / Return
Audio	Audio / Lang I/II
Karaoke	Eject / Surround
Subtitle	Subtitle / EQ
VFP	TV/Radio /
Key b	Shift + Subtitle / EQ
Key #	Shift + Setup / OPT / Tools
Repeat	Green / APP / Repeat
Top Menu	D.Menu / Top





Original	Recharge	Original	Recharge
 Up	 Up	 Stop	 Stop / Hold
 Tv/Video	 Shift + TV/Video / Program	 Pause	 Pause / Step / Freeze
 Menu	 Menu / Home	 I<</Prev	 I<< / Preset-
 Left	 Left	 I<< Group Skip	 Shift + Left
 Tv Channel-	 Shift + CH- /	 >>I/Next	 >>I / Preset+
 Enter	 OK	 >>I Group Skip	 Shift + Right
 Tv Channel+	 Shift + CH+ /	 <</Slow-	 << / Tune-
 Right	 Right	 >>/Slow+	 >> / Tune+
 Set Up	 Setup / OPT /	 Active Bass Extension +	 CH+ / Page+
 Down	 Down	 3D Phonic	 Picture / Format
 On Screen	 Display / Media	 Sound Mode	 Sound / Title
 FM/AM	 Red / Netflix / Search	 Active Bass Extension -	 CH- / Page-
 FM Mode	 Smart / List	 DVD Level	 Shift + Display / Media
 Play/Tape A	 Shift + Play /	 Rhythm AX	 Text / Goto
 <> Tape B	 Yellow / YouTube / Repeat	 Fade Muting	 Mute / Dimmer
 Play DVD/CD	 Play / Slow	 Vol-	 Vol-
 AUX	 Shift + 7	 Tv Vol-	 Shift + Down



