



Original	Recharge
Power	Power
Tv Vol+	Vol+
CH+	CH+ / Page+
Tv Vol-	Vol-
CH-	CH- / Page-
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
+10/100+	Guide / EPG / -/--
0	0
10/Tv Return	Fav / Marker / PC

Original	Recharge







 






 
 






Original	Recharge
Power	Power
Play	Play / Slow
Pause	Pause / Step / Freeze
Stop	Stop / Hold
<<	<< / Tune-
>>	>> / Tune+
CH+	CH+ / Page+
CH-	CH- / Page-
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9

Original	Recharge
0	0





Original	Rechange
 Power	 Power
 Muting	 Mute / Dimmer
 Play	 Play / Slow
 Pause/FM Mode	 Pause / Step / Freeze
 Stop/Memory	 Stop / Hold
 ←/Rec	 Rec / Rec Mode
 <<	 << / Tune-
 >>	 >> / Tune+
 I<</Tuning-	 I<< / Preset-
 >>I/Tuning+	 >>I / Preset+
 Surr.	 Sound / Title
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Open/Close	 Eject / Surround
 Page	 Picture / Format
 Zoom	 Zoom / Size
 Sleep	 Sleep / Timer

Original	Rechange
 Tv/Video	 TV/Radio /
 Setting	 D.Menu / Top
 Set Up	 Setup / OPT /
 VFP/Scan Mode	 AV / Input / RDS
 Menu	 Menu / Home
 Up	 Up
 Angle	 Info / Angle
 Left	 Left
 Enter	 OK
 Right	 Right
 Cancel	 Exit / Cancel / Clear
 Down	 Down
 Return	 Back / Return
 Audio Vol+	 Vol+
 S.WFR+	 CH+ / Page+
 Audio Vol-	 Vol-
 On Screen	 Display / Media





Original	Rechange
S-WFR-	CH- / Page-
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
+10/100+	Guide / EPG / -/--
0	0
10/Tv Return	Fav / Marker / PC
Repeat	Green / APP / Repeat
A-B RPT	Yellow / YouTube / Repeat
AUX Digital	Blue / Prime Video / Random
Dimmer	Shift + Mute / Dimmer

Original	Rechange
Play Mode	Shift + Play /
Title Group	Shift + Sound / Title
FM/AM	Shift + TV/Radio / Program
Top Menu	Shift + D.Menu / Top Menu
Center+	Shift + Up
Center-	Shift + Down
L-Surr+	Shift + Vol+
Treble+	Shift + CH+ /
L-Surr-	Shift + Vol-
Treble-	Shift + CH- /
DVD	Shift + 2
FL. Disp	Shift + 5
AUX	Shift + 7
Surr R+	Shift + 8
Surr R-	Shift + 0

