 

 
 





 

 

 



 

 

 
 


 





 
 

 







Original	Rechange	Original	Rechange
 OP/CL	 Eject / Surround	 Angle	 Info / Angle
 Source	 AV / Input / RDS	 Audio	 Audio / Lang I/II
 Power	 Power	 Menu	 Menu / Home
 1	 1	 Up / CH+	 Up
 2	 2	 Up / CH+	 CH+ / Page+
 3	 3	 Setup	 Setup / OPT /
 4	 4	 Left	 Left
 5	 5	 Enter	 OK
 6	 6	 Right	 Right
 7	 7	 Rev	 << / Tune-
 8	 8	 Down / CH-	 Down
 9	 9	 Down / CH-	 CH- / Page-
 0	 0	 Next	 >>I / Preset+
 10+	 Guide / EPG / -/-	 Fwd	 >> / Tune+
 Auto Scan	 Sleep / Timer	 Prev	 I<< / Preset-
 Title / Text	 Sound / Title	 Vol-	 Vol-
 Subtitle	 Subtitle / EQ	 Play/Pause	 Play / Slow





Original		Recharge		Original		Recharge	
	Play/Pause		Pause / Step / Freeze		Prog / EPG	+	Shift + Guide / EPG / -/-
	Vol+		Vol+		V.Mode	+	Shift + 4
	Stop		Stop / Hold		V.Mode		Picture / Format
	Resume		Rec / Rec Mode		Step	+	Shift + Pause / Step /
	Zoom		Zoom / Size		A-B	+	Shift + Yellow / YouTube /
	Mute		Mute / Dimmer				
	Red / Clear		Exit / Cancel / Clear				
	Red / Clear		Red / Netflix / Search				
	Green / Ran		Green / APP / Repeat				
	Yellow / PBC		Yellow / YouTube / Repeat				
	Blue / Repeat	+	Shift + Green / APP /				
	Blue / Repeat		Blue / Prime Video / Random				
	OSD		Display / Media				
	N/P		Text / Goto				
	Slow	+	Shift + Play /				
	Return		Back / Return				
	Prog / EPG		TV/Radio /				



Program