





 

 

 

 

 

 

 



 



 

 









Original	Rechange
 Power	 Power
 Red/Demo	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Option	 Setup / OPT /
 [I]	 Info / Angle
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Menu/Browse	 Menu / Home
 [=]	 Text / Goto
 Vol+	 Vol+
 P+	 CH+ / Page+
 Vol-	 Vol-

Original	Rechange
 Mute	 Mute / Dimmer
 P-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 AV	 AV / Input / RDS
 0	 0
 P<P	 Back / Return
 Ambilight	 Smart / List
 Mode	 D.Menu / Top
 <<	 << / Tune-





Original	Recharge	Original	Recharge
Stop/Cancel	Stop / Hold		
Play	Play / Slow		
>>	>> / Tune+		
Rec	Rec / Rec Mode		
[i+]	Display / Media		
[1 2]	Picture / Format		
FAV	Fav / Marker / PC		

Original	Recharge

