


Original	Rechange
Power	Power
TV / Video	AV
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
/--	GUIDE
Quick	Pre Ch
Mute	Mute
Sleep	Sleep
Skip	Exit

Original	Rechange
Display	Info
Up / Prog +	Ch +
Up / Prog +	Up
Down / Prog -	Ch -
Down / Prog -	Down
Right / Vol +	Vol +
Right / Vol +	Right
Left / Vol -	Vol -
Left / Vol -	Left
Menu	Menu
Menu	Ok
P-STD	Shift + Format
S-STD	Dual
PC Auto ADJ	Smart
PC / TV/PC	Media
M / S	TV/R
Surround	Shift + Dual

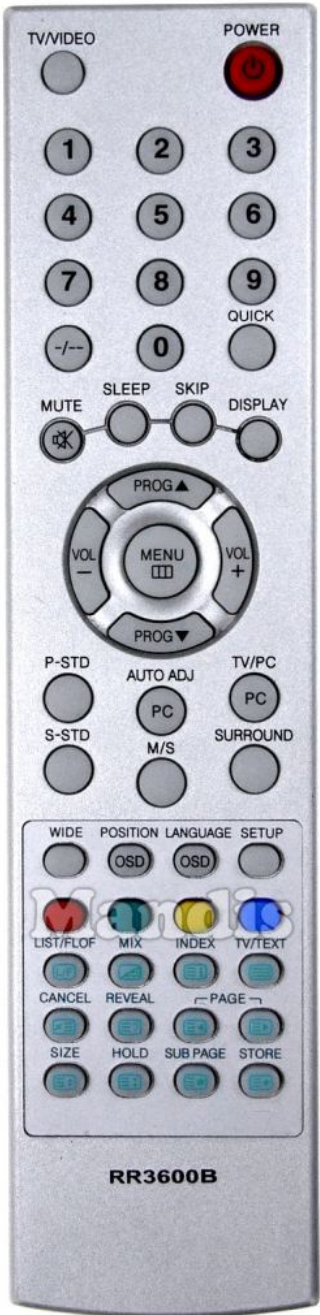



Original		Rechange	
	Wide		Format
	OSD Position		3D
	OSD Language		Shift + 3D
	Setup		Options
	Red		Red
	Green		Green
	List / FLOF		List
	Yellow		Yellow
	Blue		Blue
	Mix		Shift + Text
	Index		Shift + Info
	TV / Text		Text
	Cancel		Back
	Subpage		Subt
	Reveal		Play
	Page -		I<<
	Page +		>>I

Original		Rechange	
	Size		Eject
	Hold		Stop
	Store		Shift + Smart

