



Original		Rechange		Original		Rechange	
	Power		Power		Left		Left
	Mute		Mute / Dimmer		Enter		OK
	1		1		Right		Right
	2		2		Menu		Menu / Home
	3		3		Down		Down
	4		4		Exit		Exit / Cancel / Clear
	5		5		Vol +		Vol+
	6		6		List		Smart / List
	7		7		CH +		CH+ / Page+
	8		8		Vol -		Vol-
	9		9		CH -		CH- / Page-
	Source		AV / Input / RDS		Fav		Fav / Marker / PC
	0		0		Sleep		Sleep / Timer
	Info		Info / Angle		Index		Display / Media
	DMP		D.Menu / Top		Recall		Back / Return
	Up		Up		Red / <<		Red / Netflix / Search
	EPG		Guide / EPG / -/-		Red / <<		<< / Tune-





Original	Recharge	Original	Recharge
 Green / >>	 >> / Tune+		
 Green / >>	 Green / APP / Repeat		
 Yellow / I<<	 I<< / Preset-		
 Yellow / I<<	 Yellow / YouTube / Repeat		
 Blue / >>I	 Blue / Prime Video / Random		
 Blue / >>I	 >>I / Preset+		
 Text / Play/Pause	 Text / Goto		
 Text / Play/Pause	 Pause / Step / Freeze		
 Text / Play/Pause	 Play / Slow		
 Stop / Still	 Stop / Hold		
 Timer / Subtitle	 Subtitle / EQ		
 Size / Aspect	 Zoom / Size		
 Cancel [≡X]	 Shift + Exit / Cancel / Clear		
 Radio	 TV/Radio /		
 Audio / I/II	 Audio / Lang I/II		
 Rec	 Rec / Rec Mode		







 

 





 








 














Original		Rechange		Original		Rechange	
	Power		Power		Left		Left
	Mute		Mute / Dimmer		Enter		OK
	1		1		Right		Right
	2		2		Menu		Menu / Home
	3		3		Down		Down
	4		4		Exit		Exit / Cancel / Clear
	5		5		Vol+		Vol+
	6		6		List		Smart / List
	7		7		CH+		CH+ / Page+
	8		8		Vol-		Vol-
	9		9		CH-		CH- / Page-
	[≡?]/Source		AV / Input / RDS		♥		Fav / Marker / PC
	0		0		Sleep		Sleep / Timer
	[≡i]/Info		Info / Angle		Index		Display / Media
	DMP		D.Menu / Top		Back		Back / Return
	Up		Up		Red		Red / Netflix / Search
	EPG		Guide / EPG / -/--		<<		<< / Tune-





Original	Recharge
 Green	 Green / APP / Repeat
 >>	 >> / Tune+
 Yellow	 Yellow / YouTube / Repeat
 l<<	 l<< / Preset-
 Blue	 Blue / Prime Video / Random
 >>	 >>  / Preset+
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 [=]	 Text / Goto
 Stop/Still	 Stop / Hold
 [=+]	 Picture / Format
 [=o]/Subtitle	 Subtitle / EQ
 [=♦]/[+]	 Zoom / Size
 [=x]	 Setup / OPT /
 Radio	 TV/Radio /
 Audio	 Audio / Lang I/II
 Rec	 Rec / Rec Mode

Original	Recharge

