








 













Original	Recharge
 Standby	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 TV / STB	 AV / Input / RDS
 0	 0
 TV / Radio	 TV/Radio /
 CH +	 CH + / Page+
 Mute	 Mute / Dimmer
 Vol +	 Vol+
 CH -	 CH - / Page-

Original	Recharge
 Pause	 Pause / Step / Freeze
 Vol -	 Vol-
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Menu	 Menu / Home
 Red / SUB-T	 Subtitle / EQ
 Red / SUB-T	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow / Timer	 Yellow / YouTube / Repeat
 Blue / Info	 Blue / Prime Video / Random
 Blue / Info	 Info / Angle
 P.STD	 Picture / Format
 P.Size	 Zoom / Size





Original		Recharge	
	A L/R		Sound / Title
	Text		Text / Goto
	Recall		Back / Return
	Recall		Fav / Marker / PC
	EPG		Guide / EPG / -/-
	A.Lang		Audio / Lang I/II
	Sleep		Sleep / Timer

Original		Recharge	

