





Original	Rechange
Power	Power
Display	Shift + Info
Mute	Mute
Source	Shift + AV
Sleep	Sleep
Picture	Shift + Format
Sound	Dual
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0

Original	Rechange
QV	Pre Ch
SUBTL	Subt
EPG	Guide
Page +	Shift + Ch +
Page -	Shift + Ch -
Info	Info
ATV Menu	Shift + Menu
DTV Menu	Menu
Up	Up
Left	Left
OK	Ok
Right	Right
Down	Down
CH +	Ch +
CH -	Ch -
I/II / Exit	Exit
I/II / Exit	Shift + Dual





Original	Rechange
 Vol +	 Vol +
 Vol -	 Vol -
 Text	 Text
 Index	 Smart
 Cancel	 Back
 Size	 Format
 Mix	 Shift + Text
 SubPg	 Shift + Subt
 Reveal	 Options
 Hold	 Stop
 TV	 Shift + TV/R
 AV	 AV
 VGA	 Media
 DTV	 TV/R
 Red	 Red
 Green	 Green
 Yellow	 Yellow

Original	Rechange
 Blue	 Blue

