


 


 











 


 

 
































 





 



 





 














| Original | | Recharge | | Original | | Recharge | |
|---|------------------|---|---------------|---|------------|---|--------|
|  | Receiver On |  | Power |  | 1 |  | 1 |
|  | Receiver Standby |  +  | Shift + Power |  | 2 |  | 2 |
|  | Power TV |  +  | Shift + TV/R |  | 3 |  | 3 |
|  | DVD/6CH |  +  | Shift + Guide |  | 4 |  | 4 |
|  | Video 1 |  +  | Shift + 1 |  | 5 |  | 5 |
|  | Video 2 |  +  | Shift + 2 |  | 6 |  | 6 |
|  | Video 3 |  +  | Shift + 3 |  | 7 |  | 7 |
|  | CD/DVD |  +  | Shift + 4 |  | 8 |  | 8 |
|  | MD/Tape |  +  | Shift + 5 |  | 9 |  | 9 |
|  | Phono |  +  | Shift + 6 |  | 0 |  | 0 |
|  | AV Aux |  +  | Shift + 7 |  | +10 |  | Guide |
|  | Tuner |  +  | Shift + 8 |  | +100 |  | Pre Ch |
|  | Active EQ |  | Blue |  | Tone |  | Red |
|  | TV Input |  +  | Shift + AV |  | Bass Boost |  | Green |
|  | TV Mute |  +  | Shift + Mute |  | Loudness |  | Yellow |
|  | TV Vol+ |  +  | Shift + Vol + |  | Mute |  | Mute |
|  | TV Vol- |  +  | Shift + Vol - |  | Volume Up |  | Vol + |





| Original | | Rechange | | Original | | Rechange | |
|---|----------------|---|-------|---|--------------------------|---|---------|
|  | Volume Down |  | Vol - |  | Listen Mode Down |  | Ch - |
|  | Top Menu/Set |  | Menu |  | DSP Mode |  | List |
|  | Menu/Sound |  | Info |  | Dolby Virtual |  | Dual |
|  | Up |  | Up |  | Stereo |  | Subt |
|  | Left |  | Left |  | THX |  | Options |
|  | Enter |  | Ok |  | Input Mode |  | AV |
|  | Right |  | Right |  | Disc Select/Input Select |  | Eject |
|  | Down |  | Down |  | Disc Skip |  | Text |
|  | Dimmer |  | Pause | | | | |
|  | Band |  | Play | | | | |
|  | Auto/Mono |  | Stop | | | | |
|  | Sleep |  | Rec | | | | |
|  | P.Call- |  | I<< | | | | |
|  | P.Call+ |  | >>I | | | | |
|  | Tuning- |  | << | | | | |
|  | Tuning+ |  | >> | | | | |
|  | Listen Mode Up |  | Ch + | | | | |

