













 
























 















 





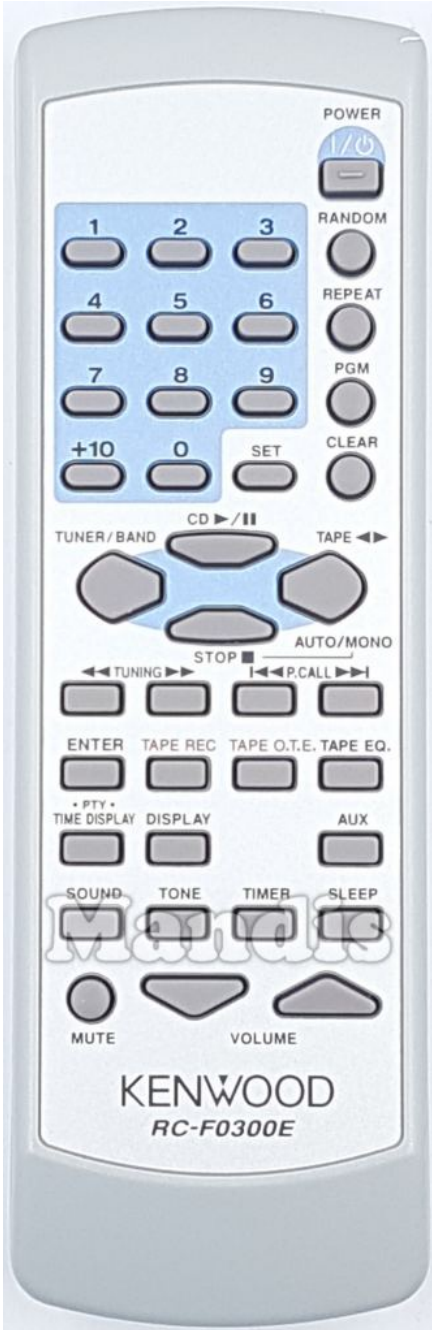 


| Original | Rechange | Original | Rechange |
|--|---|--|---|
|  Power |  Power |  PTY/Time Display |  Text / Goto |
|  Mute |  Mute / Dimmer |  Set |  Menu / Home |
|  Play/Pause CD |  Play / Slow |  Enter |  OK |
|  <> Tape |  Pause / Step / Freeze |  Clear |  Exit / Cancel / Clear |
|  Stop/Auto/Mono |  Stop / Hold |  Volume+ |  Vol+ |
|  Tape Rec |  Rec / Rec Mode |  Volume- |  Vol- |
|  << Tuning |  << / Tune- |  Display |  Display / Media |
|  Tuning >> |  >> / Tune+ |  1 |  1 |
|  I<< P.Call |  I<< / Preset- |  2 |  2 |
|  P.Call >>I |  >>I / Preset+ |  3 |  3 |
|  Sound |  Sound / Title |  4 |  4 |
|  Tape EQ. |  Subtitle / EQ |  5 |  5 |
|  Tone |  Picture / Format |  6 |  6 |
|  Tape O.T.E. |  Zoom / Size |  7 |  7 |
|  Sleep |  Sleep / Timer |  8 |  8 |
|  Tuner/Band |  TV/Radio / |  9 |  9 |
|  PGM |  Setup / OPT / |  +10 |  Guide / EPG / -/- |





| Original | Recharge | Original | Recharge |
|----------|--|----------|----------|
| 0 | HDMI - BAT 0 | | |
| REPEAT | APP Green / APP / Repeat | | |
| RANDOM | Prime Video RANDOM Blue / Prime Video / Random | | |
| TIMER | SHIFT + TIMER SLEEP Shift + Sleep / Timer | | |
| AUX | SHIFT + AUX - HDD 7 Shift + 7 | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

