

 







 





 














| Original   | Rechange  |
|--|---|
|  PTY            |  Smart / List                |
|  RDS/Display    |  Display / Media             |
|  Stereo/Mono    |  Audio / Lang I/II           |
|  Power          |  Power                       |
|  Intro          |  Fav / Marker / PC           |
|  Random         |  Blue / Prime Video / Random |
|  Repeat         |  Green / APP / Repeat        |
|  Timer Set      |  Menu / Home                 |
|  1              |  1                           |
|  2              |  2                           |
|  3            |  3                         |
|  Timer On/Off |  Guide / EPG / -/--        |
|  4            |  4                         |
|  5            |  5                         |
|  6            |  6                         |
|  Sleep        |  Sleep / Timer             |
|  7            |  7                         |

| Original  | Rechange   |
|---|--|
|  8             |  8                      |
|  9             |  9                      |
|  EQ/X-Bass     |  Sound / Title          |
|  0             |  0                      |
|  Program       |  TV/Radio /             |
|  File Search   |  Red / Netflix / Search |
|  Mute          |  Mute / Dimmer          |
|  Left          |  Left                   |
|  I<</Search    |  I<< / Preset-          |
|  Enter         |  OK                     |
|  Up          |  Up                   |
|  Volume Up   |  Vol+                 |
|  >>I/Search  |  >>I / Preset+        |
|  Right       |  Right                |
|  Volume Down |  Vol-                 |
|  Down        |  Down                 |
|  Tuner/Band  |  Shift + 6            |





|   | Original      | Recharge  |
|---|---------------|---|
|  | Tape/Mode     |  +  Shift + 5 |
|  | CD            |  +  Shift + 3 |
|  | Rec           |  Rec / Rec Mode  |
|  | Reverse/Pause |  Pause / Step / Freeze   |
|  | Stop          |  Stop / Hold   |
|  | Play/Pause    |  Play / Slow   |
|  | Down/P.Call-  |  CH- / Page-   |
|  | Up/P.Call+    |  CH+ / Page+   |
|   |               |   |
|   |               |   |
|   |               |   |
|   |               |   |
|   |               |   |
|   |               |   |
|   |               |   |
|   |               |   |
|   |               |   |
|   |               |   |
|   |               |   |
|   |               |   |
|   |               |   |
|   |               |   |
|   |               |   |
|   |               |   |
|   |               |   |
|   |               |   |
|   |               |   |

|  | Original | Recharge |
|--|----------|----------|
|  |          |          |
|  |          |          |
|  |          |          |
|  |          |          |
|  |          |          |
|  |          |          |
|  |          |          |
|  |          |          |
|  |          |          |
|  |          |          |
|  |          |          |
|  |          |          |
|  |          |          |
|  |          |          |
|  |          |          |
|  |          |          |
|  |          |          |
|  |          |          |
|  |          |          |
|  |          |          |
|  |          |          |
|  |          |          |
|  |          |          |
|  |          |          |
|  |          |          |
|  |          |          |
|  |          |          |
|  |          |          |
|  |          |          |
|  |          |          |

