



Original		Rechange		Original		Rechange	
	Mute		Mute / Dimmer		Up		Up
	Power		Power		Left		Left
	1		1		OK		OK
	2		2		Right		Right
	3		3		Down		Down
	4		4		Exit		Exit / Cancel / Clear
	5		5		Recall		Back / Return
	6		6		Menu		Menu / Home
	7		7		CH+		CH+ / Page+
	8		8		Text		Text / Goto
	9		9		Option		Setup / OPT /
	EPG		Guide / EPG / -/--		Vol+		Vol+
	0		0		CH-		CH- / Page-
	List		Smart / List		F1		Shift + 1
	Mode		D.Menu / Top		F2		Shift + 2
	i		Info / Angle		Vol-		Vol-
	TV/R Live		TV/Radio /		Rec		Rec / Rec Mode





Original	Recharge
Play	Play / Slow
Archive	Display / Media
<<	<< / Tune-
Stop	Stop / Hold
Pause	Pause / Step / Freeze
>>	>> / Tune+
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random

Original	Recharge

