



Original	Recharge
Power	Power
List	List
Mute	Mute
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
TV/R	TV/R
Home	Smart
FAV	Shift + Pre Ch
Recall	Pre Ch

Original	Recharge
Audio	Dual
Vol +	Vol +
Vol -	Vol -
P +	Shift + Ch +
CH+	Ch +
P -	Shift + Ch -
Up	Up
CH-	Ch -
Left	Left
OK	Ok
Right	Right
Down	Down
Menu	Menu
Info	Info
EPG	Guide
Exit	Exit
OPT	Options





Original		Rechange		Original		Rechange	
	Text		Text				
	SUB		Subt				
	Message		Media				
	Pause		Pause				
	Stop		Stop				
	<<		<<				
	>>		>>				
	Rec		Rec				
	Play		Play				
	I<<		I<<				
	>>I		>>I				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				

