

 


 

 

 










 














Original	Rechange	Original	Rechange
	Power		Power
	Mute		Mute
	COMP		Smart
	HDMI		Media
	AV		AV
	TV		Shift + Media
	Source		Shift + AV
	Info		Info
	Menu		Menu
	Aspect		Format
	Still		Pause
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Audio		Dual
	TV / Radio		TV/R
	Sub		Subt
	Text		Text
	[≡?]		Shift + D. Menu
	[≡^v]		Play
	Mix		Options
	EPG		Guide
	Red / P.Mode		Red
	Green / S.Mode		Green
	Yellow / S.Effect		Yellow
	Blue / Stereo		Blue
	Vol +		Vol +
	Vol -		Vol -
	Back		Back
	CH +		Ch +
	CH -		Ch -





Original		Rechange		Original		Rechange	
	1		1		Sleep		Sleep
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	Fav		Shift + Pre Ch				
	Prev		Pre Ch				
	PIP		D. Menu				
	P.Source		Eject				
	P.Size		3D				
	Position		List				
	P.Swap		Shift + Back				

