














 
 
 






Original	Rechange
 Power	 Power
 TV/RAD	 TV/Radio /
 Input	 AV / Input / RDS
 AV Mode	 Picture / Format
 Energy Saving	 Eject / Surround
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 List	 Smart / List
 0	 0
 Q.View	 Display / Media

Original	Rechange
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 PR+/Page Up	 CH+ / Page+
 Vol-	 Vol-
 PR-/Page Down	 CH- / Page-
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Menu	 Menu / Home
 Down	 Down
 Return	 Back / Return
 Red	 Red / Netflix / Search
 Green/Stop	 Green / APP / Repeat
 Green/Stop	 Stop / Hold
 Yellow/Play	 Yellow / YouTube / Repeat
 Yellow/Play	 Play / Slow





Original	Recharge	Original	Recharge
	Blue/Prime Video / Random		
	Pause / Step / Freeze		
	Text / Goto		
	I<< / Preset-		
	Setup / OPT /		
	<< / Tune-		
	>>I / Preset+		
	Subtitle / EQ		
	>> / Tune+		
	Sleep / Timer		
	D.Menu / Top		
	Info / Angle		
	Guide / EPG / -/--		
	Fav / Marker / PC		

Original	Recharge

