



Original	Rechange
Power	Power
TV/RAD	TV/Radio /
Input	AV / Input / RDS
AV Mode	Picture / Format
Energy Saving	Eject / Surround
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
List	Smart / List
0	0
Q.View	Display / Media

Original	Rechange
Vol+	Vol+
Mute	Mute / Dimmer
PR+/Page Up	CH+ / Page+
Vol-	Vol-
PR-/Page Down	CH- / Page-
Up	Up
Left	Left
OK	OK
Right	Right
Menu	Menu / Home
Down	Down
Return	Back / Return
Red	Red / Netflix / Search
Green/Stop	Green / APP / Repeat
Green/Stop	Stop / Hold
Yellow/Play	Yellow / YouTube / Repeat
Yellow/Play	Play / Slow





Original	Recharge
Blue/Pause	Blue / Prime Video / Random
Blue/Pause	Pause / Step / Freeze
Text/[≡]	Text / Goto
T.OPT/<<<	I<<< / Preset-
T.OPT/<<<	Setup / OPT /
T.OPT/<<<	<<< / Tune-
Subtitle/>>>	>>>I / Preset+
Subtitle/>>>	Subtitle / EQ
Subtitle/>>>	>>> / Tune+
Simplink	Sleep / Timer
Q.Menu	D.Menu / Top
Info	Info / Angle
Guide	Guide / EPG / -/--
FAV/Mark	Fav / Marker / PC

Original	Recharge

