




Original	Recharge	Original	Recharge
 Power	 Power	 Vol+	 Vol+
 Portal/Energy Saving	 Sleep / Timer	 Fav	 Fav / Marker / PC
 []/Ratio	 Picture / Format	 PR+/Page Up	 CH+ / Page+
 Input	 AV / Input / RDS	 Vol-	 Vol-
 TV	 TV/Radio /	 3D	 Zoom / Size
 1	 1	 PR-/Page Down	 CH- / Page-
 2	 2	 Mute	 Mute / Dimmer
 3	 3	 Settings	 Setup / OPT /
 4	 4	 Info/Home	 Info / Angle
 5	 5	 Q.Menu/3D	 Menu / Home
 6	 6	 Up	 Up
 7	 7	 Left	 Left
 8	 8	 OK	 OK
 9	 9	 Right	 Right
 List	 Smart / List	 Down	 Down
 0	 0	 Back	 Back / Return
 Q.View	 D.Menu / Top	 Guide	 Guide / EPG / -/-

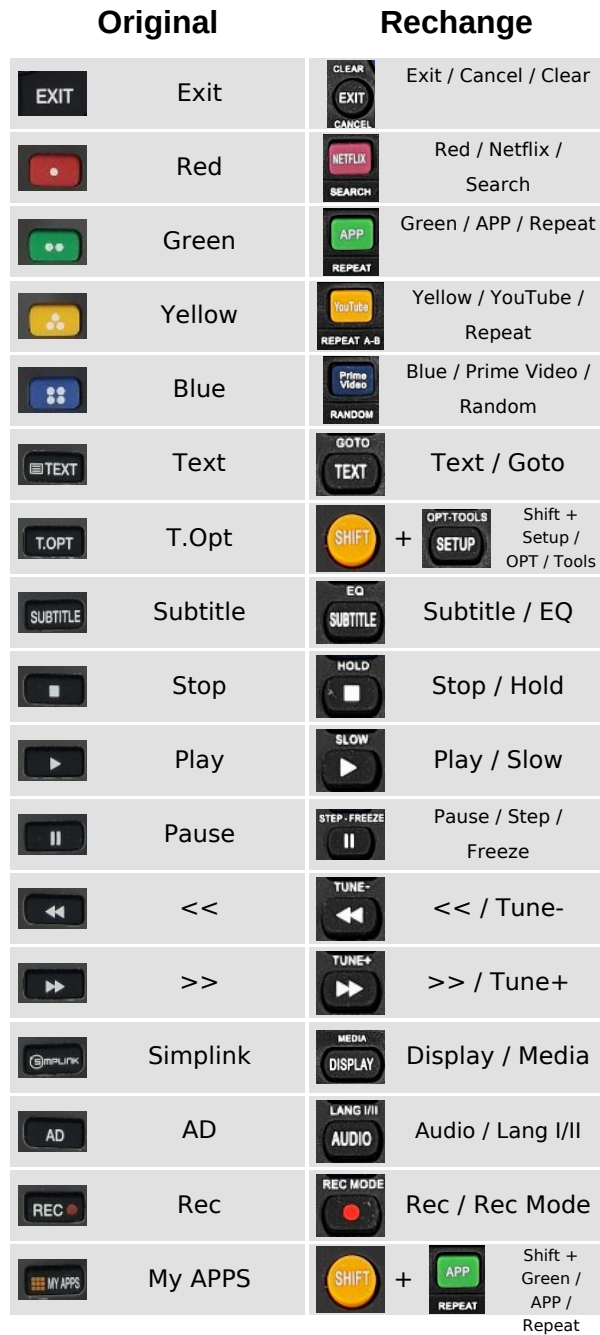



Power DIMMER MUTE SHIFT

TV DVD SAT AUX

SLOW STEP-FREEZE HOLD REC MODE

Play Pause Stop

TUNE- TUNE+ PRESET- PRESET+

Left Arrow Right Arrow

TITL LANG VBI EQ SURROUND

SOUND AUDIO SUBTITLE

FORMAT SIZE TIMER PROGRAM

PICTURE ZOOM SLEEP TV/RADIO

TOP MENU OPT-TOOLS GOTO RDS

D.MENU SETUP TEXT AV INPUT

HOME ANGLE

MENU INFO

OK

Left Arrow Right Arrow Up Arrow Down Arrow

CLEAR EXIT CANCEL RETURN BACK

LIST SMART MEDIA DISPLAY

+ VOL - CH PAGE

TV DVD CD-STS

1 2 3

VIDEO TAPE TUNER

4 5 6

AUX-HDD USB BLUETOOTH

7 8 9

J-- HDMI-SAT PC

GUIDE EPG 0 FAV MARKER

NETFLIX APP YouTube Prime Video

SEARCH REPEAT REPEAT A-B RANDOM

Mandis shop

www.mandis.tv