



| Original   | Rechange  | Original   | Rechange  |
|--|---|--|---|
|  Power          |  Power             |  Vol+     |  Vol+              |
|  e/Energy/Savin |  Sleep / Timer     |  FAV/Mark |  Fav / Marker / PC |
|  AV Mode        |  Eject / Surround  |  P+       |  CH+ / Page+       |
|  Input          |  AV / Input / RDS  |  Vol-     |  Vol-              |
|  TV/RAD         |  TV/Radio /        |  Ratio    |  Picture / Format  |
|  1              |  1                 |  P-       |  CH- / Page-       |
|  2              |  2                 |  Mute     |  Mute / Dimmer     |
|  3              |  3                 |  Menu     |  Menu / Home       |
|  4              |  4                 |  Guide    |  Guide / EPG / -/- |
|  5              |  5                 |  Q.Menu   |  D.Menu / Top      |
|  6             |  6                |  Up      |  Up               |
|  7            |  7               |  Left   |  Left            |
|  8            |  8               |  OK     |  OK              |
|  9            |  9               |  Right  |  Right           |
|  List         |  Smart / List    |  Down   |  Down            |
|  0            |  0               |  Back   |  Back / Return   |
|  Q.View       |  Display / Media |  Info   |  Info / Angle    |



