 
 



 
 
 
 
 
 











 
 
 
 
 
 






 




 
 
 









 
 
 
 

 


 



 
 

 
 
 
 

 
 

 
 
 
 
 


 


Original	Rechange	Original	Rechange
	Power		Power
	Home		Smart
	Back		Back
	Micro		Dual
	Tv		TV/R
	Mouse Down		>>
	Mouse Up		<<
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Vol+		Vol +
	Vol-		Vol -
	123/Input		AV
	3D		3D
	Mute/AD		Mute
	P+		Ch +
	P-		Ch -



 


 
 

 


 


 


 
 
Original	Recharge
 Power	 Power
 Wheel Down	 Shift + Down
 OK	 Ok
 Up	 Up
 Down	 Down
 Wheel Up	 Shift + Up
 Right	 Right
 Left	 Left
 Back	 Back
 Home / Smart	 Smart
 3D	 3D
 123 / Q.Menu	 Shift + Ok
 Vol +	 Vol +
 Vol -	 Vol -
 Mute	 Mute
 P +	 Ch +
 P -	 Ch -

Original	Recharge
 Ratio	 Format
 List	 List
 Q.Menu	 Shift + Menu
 Subtitle	 Subt
 Settings	 Shift + Options
 AD / PIP	 Dual
 >>	 >>
 >>>	 >>>I
 Play	 Play
 <<<	 <<<
 <<<<	 I<<<
 Rec	 Rec
 Pause	 Pause
 Stop / Live TV	 Stop
 AV Mode	 Shift + AV
 Text	 Text
 FAV	 Shift + Pre Ch





Original	Rechange	Original	Rechange
Exit	 Exit		
TV / PC	 +  Shift + Smart		
Input	 AV		
TV / Radio	 TV/R		
 Blue	 D		
 Yellow	 C		
 Green	 B		
 Red	 A		
0	 0		
AD	 +  Shift + Subt		
Search	 +  Shift + TV/R		
Live Menu	 MENU		
Recent	 PRE-CH		
Live Zoom	 Eject		
App	 +  Shift + Media		
Guide	 GUIDE		
Info	 INFO		

Original	Rechange	Original	Rechange
T.Opt	 Options		
Q.View	 D. Menu		
Energy Saving	 +  Shift + 3D		
9	 9		
8	 8		
7	 7		
6	 6		
5	 5		
4	 4		
3	 3		
2	 2		
1	 1		
My APPS	 Media		

