





































Original	Rechange
 Mute	 Mute / Dimmer
 Power	 Power
 Tv/AV	 AV / Input / RDS
 Multimedia	 Display / Media
 I/II	 Audio / Lang I/II
 List	 Smart / List
 QView	 D.Menu / Top
 Menu	 Menu / Home
 Up	 Up
 PR+	 CH+ / Page+
 Left	 Left
 Vol-	 Vol-
 OK	 OK
 Stop	 Stop / Hold
 Right	 Right
 Vol+	 Vol+
 Down	 Down

Original	Rechange
 PR-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 SSM	 Sound / Title
 0	 0
 PSM	 Picture / Format
 Sleep	 Sleep / Timer
 ARC	 Info / Angle
 [≡]/Text	 Text / Goto
 [≡x]/Update	 << / Tune-





Original	Recharge	Original	Recharge
Blue	Blue / Prime Video / Random		
[≡o]/Time	>> / Tune+		
[≡♦]/Size	Zoom / Size		
Green	Green / APP / Repeat		
[≡/]/Mix	<< / Preset-		
[≡+]/Hold	+ Shift + Stop /		
Yellow	Yellow / YouTube / Repeat		
[≡?]/Reveal	Play / Slow		
[≡i]/Index	Pause / Step / Freeze		
Red	Red / Netflix / Search		
[≡M]/Mode	Subtitle / EQ		

Original	Recharge

