 

 
 


 



 



 
 

 
 
 
 
 


 
 


 
 


 



 
 


 
 


 
 
 

 
 


 
 
 

 
 


 

 




 
 
 
 

 

 
 


 
 


 
 

 

 
 
 
 
 



 

 


 

 





Original	Recharge	Original	Recharge
 Power	 Power	 >>/Forward	 >>
 DVD	 Guide	 I<< Skip	 I<<
 VCR	 Pre Ch	 >>I Skip	 >>I
 Eject/Open/Close	 Eject	 Pause/Step	 Pause
 1	 1	 Play	 Play
 2	 2	 Stop	 Stop
 3	 3	 Rec	 Rec
 4	 4	 Home	 Smart
 5	 5	 Disc Menu List	 Menu
 6	 6	 Display	 Info
 7	 7	 Return	 Back
 8	 8	 PR/CH Up/TRK+	 Up
 9	 9	 PR/CH	 Down
 0	 0	 Right	 Right
 Clear	 Exit	 Left	 Left
 Av Input	 AV	 Enter	 Ok
 <</Backward	 <<	 O))/Audio	 Dual





Original	Recharge	Original	Recharge
 [...] / Subtitle	 Subt	 Vol- Tv	 Vol -
 Zoom	 Shift + Eject		
 I.Skip	 Text		
 Rec Mode	 Shift + Rec		
 Dubbing	 Format		
 Title	 Options		
 Marker	 3D		
 Play Mode	 Shift + Play		
 Thumbnail	 Sleep		
 CHP.ADD	 List		
 - Search	 Shift + TV/R		
 Tv/VCR	 TV/R		
 Power Tv	 Shift + Power		
 AV Input Tv	 Media		
 PR/CH + Tv	 Ch +		
 PR/CH - Tv	 Ch -		
 Vol+ Tv	 Vol +		

