

Original	Rechange	Original	Rechange
Power		Power	Power
OK		OK	OK
Up		Up	Up
Down		Down	Down
Right		Right	Right
Left		Left	Left
Back		Back / Return	Back / Return
Vol +		Vol+	Vol+
Vol -		Vol-	Vol-
Home / Smart		Menu / Home	Menu / Home
3D	+ 3	Shift + 3	Shift + 3
Mute		Mute / Dimmer	Mute / Dimmer
P +		CH+ / Page+	CH+ / Page+
P -		CH- / Page-	CH- / Page-
Ratio		Picture / Format	Picture / Format
List		Smart / List	Smart / List
Q.Menu		D.Menu / Top	D.Menu / Top
Subtitle		Subtitle / EQ	Subtitle / EQ
Settings		Setup / OPT /	Setup / OPT /
>>		>>I / Preset+	>>I / Preset+
>>		>> / Tune+	>> / Tune+
Play		Play / Slow	Play / Slow
AD / PIP		Sound / Title	Sound / Title
<<		I<< / Preset-	I<< / Preset-
<<		<< / Tune-	<< / Tune-
Rec		Rec / Rec Mode	Rec / Rec Mode
Pause		Pause / Step / Freeze	Pause / Step / Freeze
Text		Text / Goto	Text / Goto
FAV		Fav / Marker / PC	Fav / Marker / PC
Exit		Exit / Cancel / Clear	Exit / Cancel / Clear
Input		AV / Input / RDS	AV / Input / RDS
Blue		Blue / Prime Video / Random	Blue / Prime Video / Random
Yellow		Yellow / YouTube / Repeat	Yellow / YouTube / Repeat
Stop / Live TV		Stop / Hold	Stop / Hold



Original	Recharge		Original	Recharge	
AV Mode		+ Shift + AV / Input / RDS	5		5
Green		Green / APP / Repeat	Q.View	+ Shift + Display / Media	
Red		Red / Netflix / Search	4		4
0		0	Live Zoom		Zoom / Size
AD		Audio / Lang I/II	3		3
TV / PC	+ Shift + Fav / Marker / PC		2		2
Search	+ Shift + Red / Netflix /		1		1
App	+ Shift + Green / APP /		T.Opt	+ Shift + Setup / OPT / Tools	
TV / Radio		TV/Radio /	Energy Saving		Eject / Surround
Guide		Guide / EPG / -/--	My APPS	+ Shift + Smart / List	
Info		Info / Angle			
Recent		Sleep / Timer			
9		9			
8		8			
7		7			
Live Menu		Display / Media			
6		6			

