

| Original | Rechange | Original | Rechange |
|--------------|---|------------------|---|
| Power |  | Power | |
| OK |  | OK | |
| Up |  | Up | |
| Down |  | Down | |
| Right |  | Right | |
| Left |  | Left | |
| Back |  | Back / Return | |
| Vol + |  | Vol+ | |
| Vol - |  | Vol- | |
| Home / Smart |  | Menu / Home | |
| 3D |  +  Shift + 3 | | |
| Mute |  | Mute / Dimmer | |
| P + |  | CH+ / Page+ | |
| P - |  | CH- / Page- | |
| Ratio |  | Picture / Format | |
| List |  | Smart / List | |
| Q.Menu |  | D.Menu / Top | |
| | | Subtitle |  Subtitle / EQ |
| | | Settings |  Setup / OPT / |
| | | >> |  >> / Preset+ |
| | | >> |  >> / Tune+ |
| | | Play |  Play / Slow |
| | | AD / PIP |  Sound / Title |
| | | << |  I<< / Preset- |
| | | << |  << / Tune- |
| | | Rec |  Rec / Rec Mode |
| | | Pause |  Pause / Step / Freeze |
| | | Text |  Text / Goto |
| | | FAV |  Fav / Marker / PC |
| | | Exit |  Exit / Cancel / Clear |
| | | Input |  AV / Input / RDS |
| | | Blue |  Blue / Prime Video / Random |
| | | Yellow |  Yellow / YouTube / Repeat |
| | | Stop / Live TV |  Stop / Hold |



| Original | Recharge | Original | Recharge |
|------------|---|---------------|---|
| AV Mode |  Shift + AV / Input / RDS | 5 |  5 |
| Green |  Green / APP / Repeat | Q.View |  Shift + Display / Media |
| Red |  Red / Netflix / Search | 4 |  4 |
| 0 |  0 | Live Zoom |  Zoom / Size |
| AD |  Audio / Lang I/II | 3 |  3 |
| TV / PC |  Shift + Fav / Marker / PC | 2 |  2 |
| Search |  Shift + Red / Netflix / | 1 |  1 |
| App |  Shift + Green / APP / | T.Opt |  Shift + Setup / OPT / Tools |
| TV / Radio |  TV/Radio / | Energy Saving |  Eject / Surround |
| Guide |  Guide / EPG / -/-- | My APPS |  Shift + Smart / List |
| Info |  Info / Angle | | |
| Recent |  Sleep / Timer | | |
| 9 |  9 | | |
| 8 |  8 | | |
| 7 |  7 | | |
| Live Menu |  Display / Media | | |
| 6 |  6 | | |

