 


 









 


 




 




	Original	Recharge	Original	Recharge
	Power			List
	TV			Q.View
	Input			PR+
	Mute			PR-
	PSM			Up
	SSM			Down
	I/II			Right
	1			Left
	2			OK
	3			Vol+
	4			Vol-
	5			Menu
	6			Sleep
	7			ARC/*
	8			Text
	9			Red
	0			Green





Original	Recharge
 Yellow	 Yellow
 Blue	 Blue
 Hold	 Subt
 Size	 Format
 Mix	 D. Menu
 Time	 Shift + AV
 Reveal	 3D
 Index	 Info
 Mode	 Guide
 Update	 Pre Ch

Original	Recharge

