
















 



 



 
 
 

 
 
 


 




 



 




 
 


 
 





 












Original		Rechange		Original		Rechange	
	Power		Power		Vol +		Vol +
	Energy Saving		3D		Vol -		Vol -
	Ratio		Format		FAV / Mark		Pre Ch
	Input		AV		Mute		Mute
	TV/RAD		TV/R		P+ / Page +		Ch +
	Menu		Menu		P- / Page -		Ch -
	Q.Menu		D. Menu		1		1
	Guide		Guide		2		2
	Up		Up		3		3
	Left		Left		4		4
	OK		Ok		5		5
	Right		Right		6		6
	Down		Down		7		7
	Return / Exit		Back		8		8
	Return / Exit		Exit		9		9
	Info		Info		0		0
	AV Mode		Shift + AV		List		List





Original		Rechange		Original		Rechange	
	Q.View		Smart				
	Red		Red				
	Green / Stop		Green				
	Green / Stop		Stop				
	Yellow / Play		Yellow				
	Yellow / Play		Play				
	Blue / Pause		Blue				
	Blue / Pause		Pause				
	Text		Text				
	T.Opt / <<		Options				
	T.Opt / <<		<<				
	Subtitle / >>		Subt				
	Subtitle / >>		>>				
	Simplink		Media				
	Freeze		Shift + Pause				

