



Original	Rechange
Power	Power
Tv/Rad	TV/Radio /
Search/*	Shift + Red / Netflix /
Subtitle	Subtitle / EQ
*	Setup / OPT /
Source	AV / Input / RDS
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
List	Smart / List
0	0

Original	Rechange
.../*	Display / Media
Vol+	Vol+
FAV//Quic Acces/*	Fav / Marker / PC
CH+	CH+ / Page+
Vol-	Vol-
Guide	Guide / EPG / -/--
CH-	CH- / Page-
Mute	Mute / Dimmer
Text	Text / Goto
Home	Menu / Home
T.Opt.	Shift + Setup / OPT / Tools
Back	Back / Return
Up	Up
Exit	Exit / Cancel / Clear
Left	Left
OK	OK
Right	Right





Original	Recharge
AD/*	Audio / Lang I/II
Down	Down
Q.Menu/*	D.Menu / Top
Movies	Picture / Format
Rec/*	Rec / Rec Mode
Stop	Stop / Hold
<<	<< / Tune-
Play	Play / Slow
Pause	Pause / Step / Freeze
>>	>> / Tune+
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random

Original	Recharge

