







 

 






 











 




 



 


 



 
 


 

 

 

 













 

 


 


 

 






Original		Rechange		Original		Rechange	
	Power		Power		Vol-		Vol -
	Power Sources		TV/R		CH+		Ch +
	1		1		CH-		Ch -
	2		2		Home		Smart
	3		3		*		Menu
	4		4		Up		Up
	5		5		Down		Down
	6		6		Left		Left
	7		7		Right		Right
	8		8		OK		Ok
	9		9		Wheel Up		>>
	0		0		Wheel Down		<<
	List		List		Back		Back
	AD/SAP		Dual		Guide		Guide
	Mute		Mute		Netflix		Shift + Media
	Micro		Media		Source		AV
	Vol+		Vol +		prime video		Sleep





Original	Recharge	Original	Recharge
 Red	 Red		
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		
 MOVIES	 ECO 3D		
 Play	 PLAY MODE		
 Pause	 Pause		

