


 

 
 
 




 






 

 

 



 

 








 

 


 












Original	Rechange
 Power	 Power
 Marker	 Smart
 Open/Close	 Eject
 Search	 TV/R
 Audio	 Dual
 Subtitle	 Subt
 Angle	 Red
 Random	 Media
 Program	 Sleep
 Clear	 Exit
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7

Original	Rechange
 8	 8
 9	 9
 0	 0
 I<<	 I<<
 Play	 Play
 >>I	 >>I
 Zoom	 Shift + Eject
 Stop	 Stop
 Pause/Step	 Pause
 Display	 Info
 <I Slow	 <<
 Slow I>	 >>
 Select/Enter	 Ok
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left





Original		Rechange		Original		Rechange
MENU	Menu	TOP MENU MENU	Menu			
TITLE	Title	DISC NAV LIST	List			
SETUP	Setup	SETTINGS OPT	Options			
RETURN	Return	RETURN BACK	Back			
REPEAT	Repeat	REPEAT TEXT	Text			
A - B	A-B	PICTURE FORMAT	Format			

