 

 

 

 

 



 

 

 

 

 

 

 

 

 

 

 

 


 

 


 

 
 





Original	Rechange
 Power	 Power
 Tv/Radio	 TV/Radio /
 Blank	 Sleep / Timer
 T.Opt.	 Sound / Title
 Text	 Text / Goto
 Input	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 List	 Smart / List

Original	Rechange
 Q.View	 Picture / Format
 FAV	 Fav / Marker / PC
 3D	 Zoom / Size
 Mute	 Mute / Dimmer
 Vol+	 Vol+
 Vol-	 Vol-
 Page+	 CH+ / Page+
 Page-	 CH- / Page-
 L/R	 Audio / Lang I/II
 Info	 Info / Angle
 Still	 Menu / Home
 Settings	 Setup / OPT /
 Q.Menu	 D.Menu / Top
 Up	 Up
 Down	 Down
 Left	 Left
 Right	 Right





Original	Recharge
OK	OK
Back	Back / Return
Exit	Exit / Cancel / Clear
Subtitle	Subtitle / EQ
Guide	Guide / EPG / -/--
Stop	Stop / Hold
<<<	<<< / Tune-
Play	Play / Slow
Pause	Pause / Step / Freeze
>>>	>>> / Tune+
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random

Original	Recharge

