






 

 




 



Original	Recharge	Original	Recharge
Power	Power	Vol+	Vol+
Energy Saving	Sleep / Timer	Vol-	Vol-
AV Mode	Picture / Format	3D	Zoom / Size
Input	AV / Input / RDS	Mute/Delete	Mute / Dimmer
Tv/Rad	TV/Radio /	P-	CH- / Page-
1	1	MENU	Menu / Home
2	2	NetCast	Sound / Title
3	3	Q.Menu	D.Menu / Top
4	4	Up	Up
5	5	Left	Left
6	6	OK	OK
7	7	Right	Right
8	8	Down	Down
9	9	Exit	Exit / Cancel / Clear
List	Smart / List	Back	Back / Return
0	0		
Q.Vlew	Setup / OPT /		

Original	Recharge	Original	Recharge
Vol+	Vol+	Vol-	Vol-
Vol-	Vol-	3D	Zoom / Size
3D	Zoom / Size	Mute/Delete	Mute / Dimmer
Mute/Delete	Mute / Dimmer	P-	CH- / Page-
P-	CH- / Page-	MENU	Menu / Home
MENU	Menu / Home	NetCast	Sound / Title
NetCast	Sound / Title	Q.Menu	D.Menu / Top
Q.Menu	D.Menu / Top	Up	Up
Up	Up	Left	Left
Left	Left	OK	OK
OK	OK	Right	Right
Right	Right	Down	Down
Down	Down	Exit	Exit / Cancel / Clear
Exit	Exit / Cancel / Clear	Back	Back / Return
Back	Back / Return		





Original	Recharge
 Guide	 Guide / EPG / -/--
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue/L/R/Select	 Blue / Prime Video / Random
 Text	 Text / Goto
 T.Opt	 Shift + Setup / OPT / Tools
 Subtitle	 Subtitle / EQ
 Stop	 Stop / Hold
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 <<	 << / Tune-
 >>	 >> / Tune+
 Simplink	 Display / Media
 Info	 Info / Angle
 AD	 Audio / Lang I/II
 APP/*	 Shift + Green / APP / Repeat

Original	Recharge

