



Original	Recharge
Power	Power
Power Tv	+  Shift + Power
DVD	+  Shift + 2
VCR	+  Shift + 4
Eject/Open-Close	Eject / Surround
AV Input Tv	+  Shift + AV / Input / RDS
1	1
2	2
3	3
PR+ Tv	+  Shift + CH+ /
4	4
5	5
6	6
PR- Tv	+  Shift + CH- /
7	7
8	8
9	9

Original	Recharge
Vol+ Tv	Vol+
Rec	Rec / Rec Mode
0	0
AV Input	AV / Input / RDS
Vol- Tv	Vol-
<< Scan	<< / Tune-
Scan >>	>> / Tune+
I<< Skip	I<< / Preset-
Skip >>I	>>I / Preset+
Pause/Step	Pause / Step / Freeze
Play	Play / Slow
Stop	Stop / Hold
Home	Menu / Home
PR/TRK+	CH+ / Page+
Up	Up
Menu/List	D.Menu / Top
Left	Left





Original		Recharge		Original	Recharge
	Enter		OK		
	Right		Right		
	Return		Back / Return		
	Down		Down		
	PR/TRK-		CH- / Page-		
	Display		Display / Media		
	O))/Audio		Audio / Lang I/II		
	Title		Sound / Title		
	Marker		Fav / Marker / PC		
	Clear		Exit / Cancel / Clear		
	Red/FAV		Red / Netflix / Search		
	Green/Repeat		Green / APP / Repeat		
	Yellow/Subtitle		Yellow / YouTube / Repeat		
	Blue/Text		Blue / Prime Video / Random		
	EPG		Guide / EPG / -/--		
	Dubbing		Picture / Format		

