




 


 


 









 





 



 











 





 

 



 



 












Original		Rechange		Original		Rechange	
	Power		Power		Right		Right
	1		1		Left		Left
	2		2		OK		Ok
	3		3		PR+		Ch +
	4		4		PR-		Ch -
	5		5		Vol+		Vol +
	6		6		Vol-		Vol -
	7		7		Menu		Menu
	8		8		TV		TV/R
	9		9		Video		AV
	0		0		L/?		Guide
	Red/M		Red		L/?		Dual
	Green		Green		PC		Pre Ch
	Yellow		Yellow		Text		Text
	Blue		Blue		F[+]		3D
	Up		Up		Hold/Freeze		Format
	Down		Down		M/S		Options





	Original	Recharge	
	Mute	 MUTE	Mute
	PIP	 APP MEDIA	Media
	Auto/Page	 HOME SMART	Smart
	i	 DISPLAY INFO	Info
	Timer/Mix	 AD SUBT	Subt
	F1	 SHIFT + 1	Shift + 1
	F2	 SHIFT + 2	Shift + 2
	F3	 SHIFT + 3	Shift + 3
	F4	 SHIFT + 4	Shift + 4

	Original	Recharge

