 
 















 


 


 

 

 





























 















 



 

 









Original	Recharge
 Mute	 Mute / Dimmer
 Power	 Power
 S.Mode /	 D.Menu / Top
 S.Mode /	 Shift + D.Menu / Top Menu
 P.Mode / Title	 Sound / Title
 FAV + / Go To	 Shift + CH+ /
 FAV - / Angle	 Shift + CH- /
 <<<	 <<< / Tune-
 Play / Pause	 Play / Slow
 Play / Pause	 Shift + Play /
 >>>	 >>> / Tune+
 Reveal	 Smart / List
 I<<<	 I<<< / Preset-
 Stop	 Stop / Hold
 >>>I	 >>>I / Preset+
 Rec	 Rec / Rec Mode
 Red / Program	 Shift + Red / Netflix / Search

Original	Recharge
 Red / Program	 Red / Netflix / Search
 Green / Intro	 Green / APP / Repeat
 Yellow / Repeat	 Shift + Yellow / YouTube / Repeat A-B
 Yellow / Repeat	 Yellow / YouTube / Repeat
 Blue / A-B	 Blue / Prime Video / Random
 Index / D.Disp.	 Display / Media
 Sub-T	 Subtitle / EQ
 Audio / Lang	 Audio / Lang I/II
 Size / Zoom	 Zoom / Size
 Info	 Info / Angle
 TV / Radio	 TV/Radio /
 FAV	 Fav / Marker / PC
 Sleep	 Sleep / Timer
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear
 Input	 AV / Input / RDS
 EPG	 Guide / EPG / -/-





Original		Rechange		Original		Rechange	
	P +		CH+ / Page+		9		9
	Up		Up		Text / Setup		Text / Goto
	Vol +		Vol+		Text / Setup		Shift + Text / Text /
	Left		Left		0		0
	OK		OK		Recall / Eject		Shift + Back / Return / Return
	Right		Right		Recall / Eject		Back / Return
	P -		CH- / Page-				
	Down		Down				
	Vol -		Vol-				
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				

