
 

 

 

 



 












 
 
 
 

 


 






 



 

 
 

 

 



 

 






 












Original	Rechange	Original	Rechange
	Audio		Dual
	[ ]		Format
	Power		Power
	[ *]/SV		Subt
	V≡/LP		Options
	[≡I ]/000		Guide
	Mute/Timer		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	T		Smart
	Pause		Pause
	M		Menu
	E		3D
	i		Info
	Rec		Rec
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	OK		Ok
	Red		Red
	<<		<<
	Green		Green
	Stop		Stop
	Yellow		Yellow
	Play		Play


 
 








 
 


 

 



 

 



 



 

 



 

 



 
 


 
 
 
 
 

 
 
 
 

 
 
 











Original	Recharge	Original	Recharge
 Blue	 Blue		
 >>	 >>		








Original		Rechange		Original		Rechange	
	Mute/Timer		Mute		<<		<<
	Power		Power		Stop		Stop
	1		1		Play		Play
	2		2		>>		>>
	3		3		Pause		Pause
	4		4		Rec		Rec
	5		5		M		Menu
	6		6		E		3D
	7		7		Audio		Dual
	8		8		[≡  ]/000		Guide
	9		9		V≡/LP		Options
	0		0		[ ]		Format
	Up		Up		[ *]/SV		Subt
	Down		Down		T		Smart
	OK		Ok		i		Info
	Right		Right		Red		Red
	Left		Left		Green		Green





 

 

 

 
 
 

 
 


 
 

 
 




 
 
 


 



 






 



 


 

 











Original		Recharge		Original		Recharge	
	Yellow		Yellow				
	Blue		Blue				





Original		Rechange		Original		Rechange	
	Power		Power		T		Smart
	1		1		M		Menu
	2		2		E		3D
	3		3		Up		Up
	4		4		Down		Down
	5		5		Right		Right
	6		6		Left		Left
	7		7		OK		Ok
	8		8		Red		Red
	9		9		Green		Green
	0		0		Yellow		Yellow
	[ ]		Format		Blue		Blue
	Audio		Dual		<<		<<
	[ * ]/SV		Subt		Stop		Stop
	V≡/LP		Options		Play		Play
	[ =  ]/000		Guide		>>		>>
	Mute/Timer		Mute		Pause		Pause

