


 




 
 



 


 








	Original	Rechange		Original	Rechange
	Power		Power		0
	P/N		Smart		10+
	Audio		Dual		Zoom
	Eject		Eject		Setup
	Prog		Sleep		V-Mode
	Search		TV/R		OSD
	Subtitle		Subt		Repeat
	Angle		Red		Title
	1		1		PBC/Menu
	2		2		Up
	3		3		Down
	4		4		Right
	5		5		Left
	6		6		Enter
	7		7		Stop
	8		8		Play
	9		9		Pause





	Original	Recharge		Original	Recharge
	>>		>>		
	<<		<<		
	>>		>>		
	<<		<<		
	Vol+		Vol +		
	Vol-		Vol -		
	Mute		Mute		

	Original	Recharge		Original	Recharge

