



Original	Rechange
Power	Power
Mute	Mute / Dimmer
Play	Play / Slow
Pause	Pause / Step / Freeze
Record	Rec / Rec Mode
<</Alt	<< / Tune-
>>/List	>> / Tune+
I<<	I<< / Preset-
>>I	>>I / Preset+
Audio	Audio / Lang I/II
SUB	Subtitle / EQ
Zoom	Zoom / Size
Tv/Radio	TV/Radio /
Text	Text / Goto
Menu	Menu / Home
Up	Up
Info	Info / Angle

Original	Rechange
Left	Left
OK	OK
Right	Right
Exit	Exit / Cancel / Clear
Down	Down
Vol+	Vol+
A-Scan/A-Time	Smart / List
CH+	CH+ / Page+
Vol-	Vol-
CH-	CH- / Page-
1	1
2	2
3	3
4	4
5	5
6	6
7	7





Original		Recharge	
	8		8
	9		9
	EPG		Guide / EPG / -/--
	0		0
	FAV		Fav / Marker / PC
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	USB/Move	+	Shift + 8

Original		Recharge	

