 



 



 





























| Original   | Rechange  |
|--|---|
|  Standby  |  Power                   |
|  Info     |  Info / Angle            |
|  Subtitle |  Subtitle / EQ           |
|  Mute     |  Mute / Dimmer           |
|  Page+    |  CH+ / Page+             |
|  Play     |  Play / Slow             |
|  Pause    |  Pause / Step / Freeze   |
|  <<       |  << / Tune-              |
|  Page-    |  CH- / Page-             |
|  Stop     |  Stop / Hold             |
|  >>      |  >> / Tune+             |
|  Menu   |  Menu / Home           |
|  Up/CH+ |  Up                    |
|  Exit   |  Exit / Cancel / Clear |
|  Left   |  Left                  |
|  Vol-   |  Vol-                  |
|  OK     |  OK                    |

| Original  | Rechange  |
|---|---|
|  Right     |  Right               |
|  Vol+      |  Vol+                |
|  Record    |  Rec / Rec Mode      |
|  Down/CH-  |  Down                |
|  Timeshift |  Sleep / Timer       |
|  1         |  1                   |
|  2         |  2                   |
|  3         |  3                   |
|  Recall    |  Back / Return       |
|  4         |  4                   |
|  5        |  5                  |
|  6       |  6                 |
|  EPG     |  Guide / EPG / -/- |
|  7       |  7                 |
|  8       |  8                 |
|  9       |  9                 |
|  0       |  0                 |



