



Original	Rechange
Power	Power
Source (Games)	AV / Input / RDS
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
TV	TV/Radio /
0	0
Recall	Fav / Marker / PC
Vol+	Vol+
Mute	Mute / Dimmer
PR+	CH+ / Page+

Original	Rechange
Vol-	Vol-
World/Internet	Smart / List
PR-	CH- / Page-
Menu	Menu / Home
Q.Menu	D.Menu / Top
Up	Up
Left	Left
OK	OK
Right	Right
Down	Down
Back	Back / Return
Exit	Exit / Cancel / Clear
i	Info / Angle
Movie-Music-Phot	Display / Media
Guide	Guide / EPG / -/-
*/o	Picture / Format
*/o..	Setup / OPT /





Original	Recharge	Original	Recharge
[≡]/Text	Text / Goto		
Red	Red / Netflix / Search		
Green	Green / APP / Repeat		
Yellow	Yellow / YouTube / Repeat		
Blue	Blue / Prime Video / Random		
Lang	Audio / Lang I/II		
[≡]..	Subtitle / EQ		
[-o-]	Zoom / Size		
<<	<< / Tune-		
Pause	Pause / Step / Freeze		
>>	>> / Tune+		
Rec	Rec / Rec Mode		
Play	Play / Slow		
Stop	Stop / Hold		

